


F19, 1B


The state of the s

Reflow soldering procedure

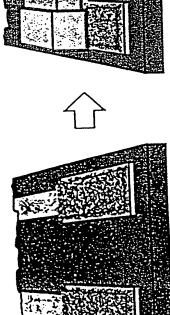


Screen print solder paste

F13.2A

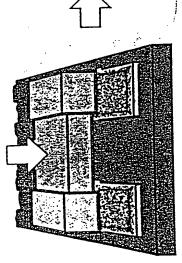

Reflow solder

Place component



F19.2B

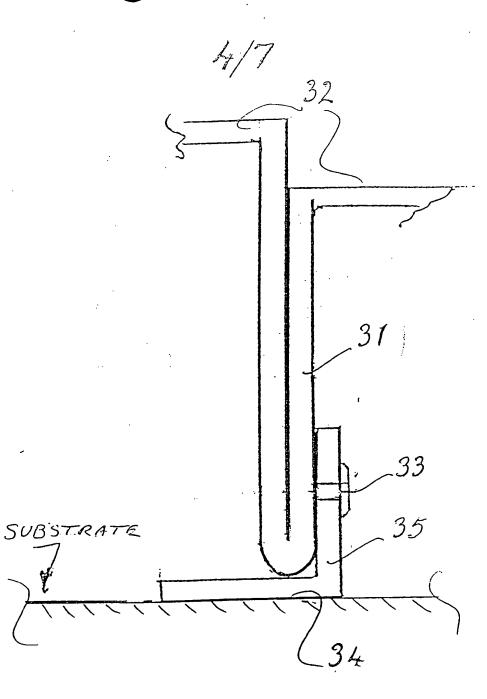


Fig. 3

SUBSTRATE

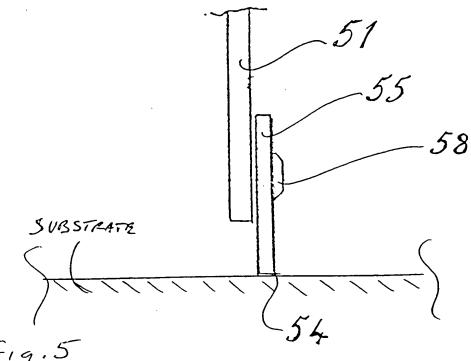


Fig.5

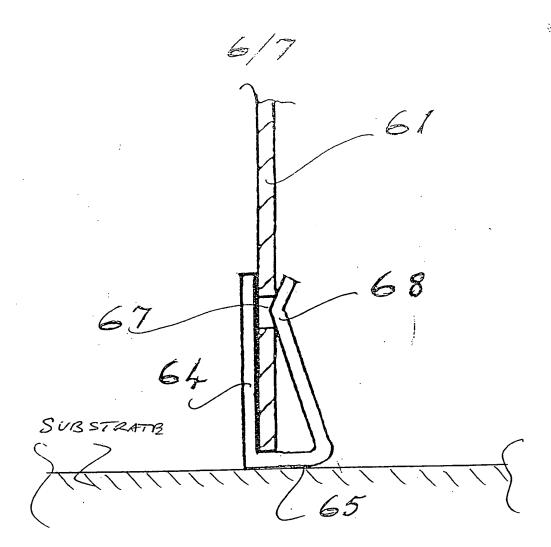


Fig. 6

